

Thunderstruck Motors EV Charger Controller v2.4



Contents

Overview	4
Installation and Theory of Operation	6
Mechanical.....	6
Power	6
J1772.....	7
Wiring Without J1772	9
Cell Loop and Pack Fault	10
Driveaway Protection	11
Profile Selection	11
CANBUS	12
CAN Protocol.....	13
CAN and Charger Message Trace.....	13
LED Operation	14
Charging	14
Determining Charge Voltage and Charge Current.....	14
Examples	15
Determining Charge Parameters for Sealed Lead Acid Batteries.....	15
Configuration	16
Serial Port	16
Charger Support.....	17
TSM2500.....	17
ELCON.....	17
LEAR	18
Determining the CAN addresses of a Charger	18
Bringup Checklist and Troubleshooting Hints	19
Firmware Upgrade	19
Command Line Interface	20
Startup Banner	20
help	20
show.....	21
show version.....	21
show config	21
show history	23
set.....	24
set <>	24
set bms.....	25
set charger<n>	25

set profile <n>	25
set map.....	27
set extindcharge.....	28
set cantermdis.....	28
set topbalance.....	28
set loopground.....	28
set linev_cb, set linec_cb.....	29
set maxv, set maxc	29
set maxbc.....	29
set termc	29
set termt.....	29
set fin_maxv, set fin_maxc, set fin_termt	29
set flt_maxv, set flt_maxc, set flt_termt.....	29
reset.....	29
reset history	29
reset profile <n>	29
reset extindcharge.....	30
reset cantermdis.....	30
reset topbalance.....	30
reset loopground.....	30
trace	30
trace <>.....	30
trace charger.....	30
trace canbus.....	30
trace state.....	31
trace off	31
measure	31
measure loop	32
measure proximity.....	32
measure pselect	32
upgrade	32
Configuring the EVCC with Multiple Chargers	33
Line Power.....	33
CAN Wiring and Addressing	33
EVCC Configuration	34
Setting the CAN address of a TSM2500 Charger	34
Charging with Multiple Chargers	35
Integration with CAN Enabled BMS	36

BMS Operation.....	36
EVCC Operation.....	36
Charging Lead Acid Batteries.....	37
Bulk Charge.....	37
Finishing Charge.....	38
Float Charge.....	38
Limitations.....	38
EVCC Change Log.....	39
Hardware v2.1.....	39
Hardware v2.3.....	39
Hardware v2.4.....	39
Warranty and Support.....	40
Document History.....	40

Figures

Figure 1 – EVCC System Diagram.....	4
Figure 2 – EVCC Enclosure.....	6
Figure 3 – EVCC Connector and Front Panel.....	6
Figure 4 – EVCC Pinout.....	6
Figure 5 - Power Connections.....	7
Figure 6 – Face of J1772 Socket.....	7
Figure 7 – J1772 Connections.....	8
Figure 8 - Wiring With J1772.....	8
Figure 9 - Wiring Without J1772 (With Charger Present Switch).....	9
Figure 10 - Wiring Without J1772 (Charging only).....	10
Figure 11 – Cell Loop and Pack Fault Connections.....	11
Figure 12 – Driveaway Protection Connections.....	11
Figure 13 – Profile Selection Connections.....	12
Figure 14 – CAN Network Diagram.....	12
Figure 15 – CAN Connections.....	13
Figure 16 – EVCC Blink Patterns.....	14
Figure 17 – Multiple Chargers - System Diagram.....	33
Figure 18 – Flooded Lead Acid Charging Profile (Trojan).....	37

Overview

The Electric Vehicle Charger Controller (EVCC) integrates charger CANBUS control and J1772 functions in a simple to use, cost effective, and environmentally robust enclosure. Charge parameters such as maximum voltage, maximum current, and total charge time are configured, saved in nonvolatile memory, and used when charging to control a CAN enabled charger. The EVCC connects to analog “cell loop” Battery Management Systems (BMSs) as well as CAN enabled BMSs.

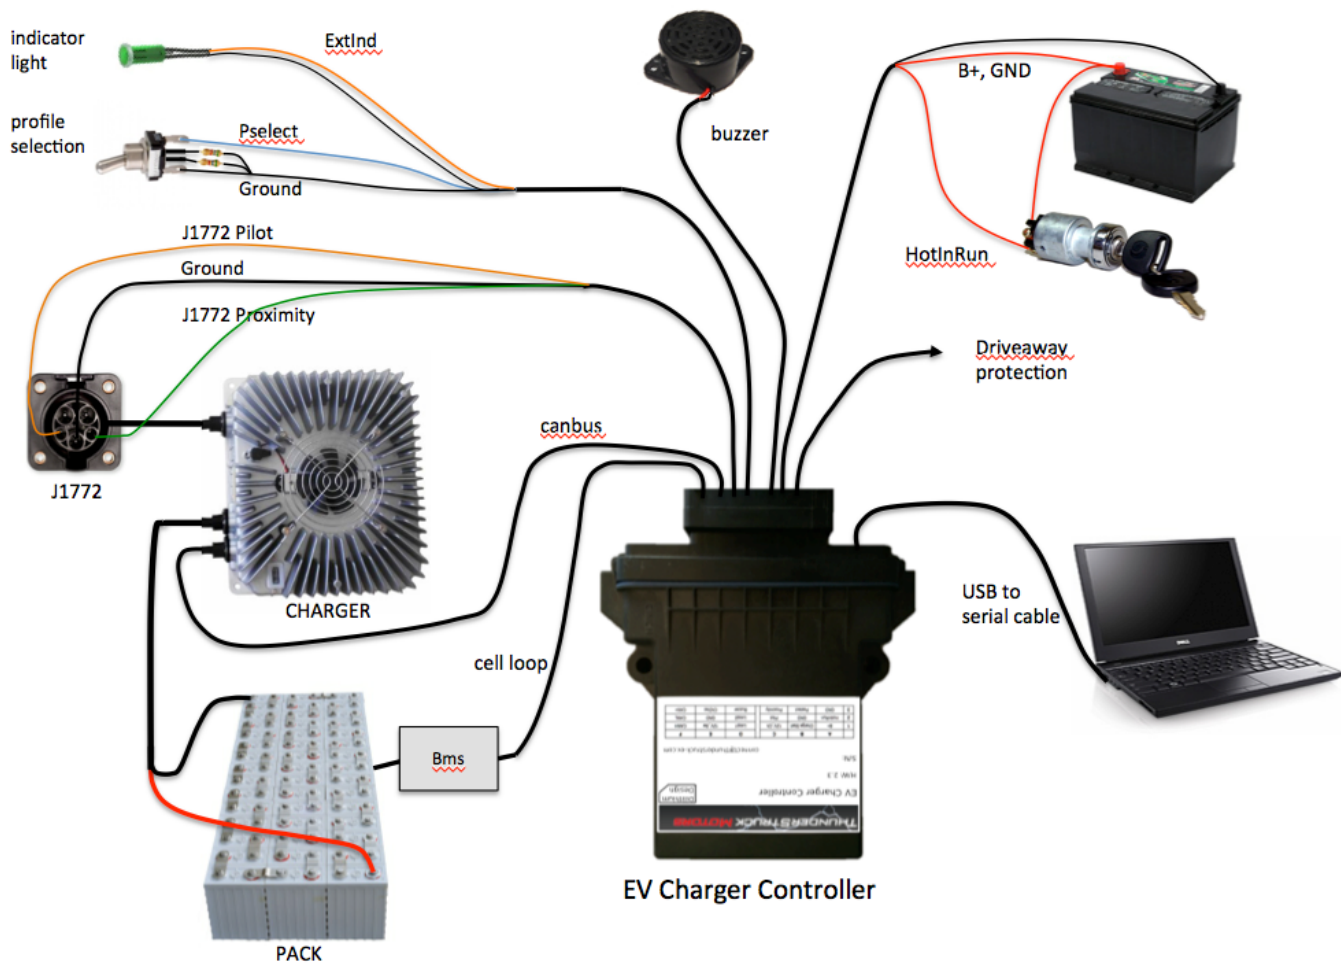


Figure 1 – EVCC System Diagram

The EVCC draws approximately 3mA of current when “off”. The EVCC senses the presence of the J1772 plug and will automatically turn itself “on” to start charging. Current draw when “on” is around 35ma. The EVCC turns itself off when charging is complete.

The EVCC is configured using a simple serial interface. This interface is used for configuration and debugging, but is not required for normal operation. Diagnostic commands are supported to verify proper wiring, to trace CANBUS messages, and to retrieve charging history.

The EVCC supports the SAE J1772 standard. J1772 defines the physical connector and protocols used between the charging station (known as the “Electric Vehicle Service Equipment”), and the Electric Vehicle. The J1772 Proximity signal is used to determine if the charger plug is present. The J1772 Pilot signal is used to start and stop charging (by

enabling and disabling the contactor in the EVSE). The J1772 Pilot duty cycle is measured and can be used to limit charging current. “Driveaway protection” is supported so that the EV cannot be driven if the charge cable is still plugged in.

The EVCC supports several CAN enabled chargers, including the Thunderstruck TSM2500 charger. Charge voltage, charge current and overall charge time are controlled completely by the EVCC over the CAN interface to the charger. A constant current/constant voltage charge curve is supported for Lithium Batteries; and a three phase charge cycle is supported for Lead Acid Batteries.

The EVCC supports up to four parallel chargers for faster charging. When multiple chargers are configured, they are individually CAN addressed. Work is divided evenly between the chargers and statistics are gathered and recorded on each charger individually.

The EVCC will stop charging if the J1772 plug becomes unplugged, a cell overvoltage error occurs, there is loss of communication between the EVCC and Charger, or the maximum configured charge time is reached. Charging also stops at the end of a normal charge cycle, which, for Lithium batteries, occurs when the charging current drops below the minimum configured charge current.

Determining cell overvoltage errors and cell undervoltage error detection is the function of an EV Battery Management System (BMS). The EVCC can be configured to interface with a BMS either by a cell loop or by CAN messages. When a CAN BMS is used, the EVCC can also be configured to handle “balance cutoff”, which lowers the charging current when a cell exceeds a “balancing threshold”.

Charging history is provided for the last sixteen charge cycles and includes: the reason that charging stopped, total charge time, maximum voltage, maximum current, final current, and watt hours delivered.

When driving, the EVCC is started by the keyswitch, and can be used as a simple “BMS Master” - it can sound a buzzer when a cell undervoltage error is detected.

EVCC installation may be customized per customer requirements. EVCC features work largely independently and it is not necessary to wire up or use all features.

The EVCC is housed in a 4.55” x 5.13” x 1.67” automotive grade water-resistant enclosure. Connections are made with a single 18 pin connector. The EVCC is shipped with a pre-wired harness and with a USB to serial port cable.

Installation and Theory of Operation

Mechanical

The enclosure outline is shown below. The EVCC can be mounted in any convenient location, however should ideally be located physically close to both the charger and the J1772 charge port.

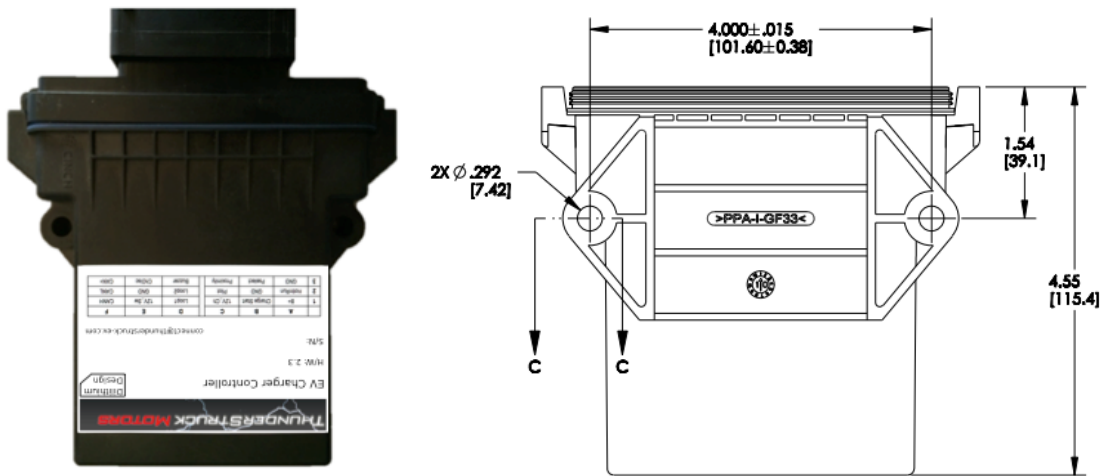


Figure 2 – EVCC Enclosure

The figure below shows the 18 pin EVCC connector and wiring harness. Note the LED to the right of the connector and the serial port jack to the left of the connector.



Figure 3 – EVCC Connector and Front Panel

The figure below shows the EVCC pinout.

	A	B	C	D	E	F
1	12V	GND	Ext_Ind	Loop1	12V_Sw	CANH
2	Ignition	GND	Pilot	Loop2	GND	CANL
3	GND	P_Select	Proximity	PackFault	OKToDrive	reserved

Figure 4 – EVCC Pinout

Power

12V and **GND** (A1, A3) are Power Inputs and should be connected to the EV 12V accessory battery and to EV Chassis Ground. All GND connections are internally connected together in the EVCC; multiple GND connections are provided on the EVCC wiring harness as a wiring convenience.

Ignition (A2) is connected to the EV Ignition switch. Supplying +12V to the **Ignition** input will turn the EVCC on.

12V_Sw (E1) is a switched output that can provide up to 500ma of current to downstream equipment when the EVCC is powered on.

Ext_Ind (C1) is a 12V output that can drive an external indicator light or a relay. By default, this output tracks the EVCC LED. However, this output may be configured to be ON when the EVCC is charging. (See “**set extindcharge**”). The ExtInd output is protected by a 500ma resettable fuse.

The figure below shows the Power connections.

	A	B	C	D	E	F
1	12V	GND	Ext_Ind	Loop1	12V_Sw	CANH
2	Ignition	GND	Pilot	Loop2	GND	CANL
3	GND	P_Select	Proximity	PackFault	OKToDrive	

Figure 5 - Power Connections

J1772

The figure below shows the J1772 EV side connector and locations of the J1772 Proximity and J1772 Pilot signals. These are connected directly to corresponding signals at the EVCC.

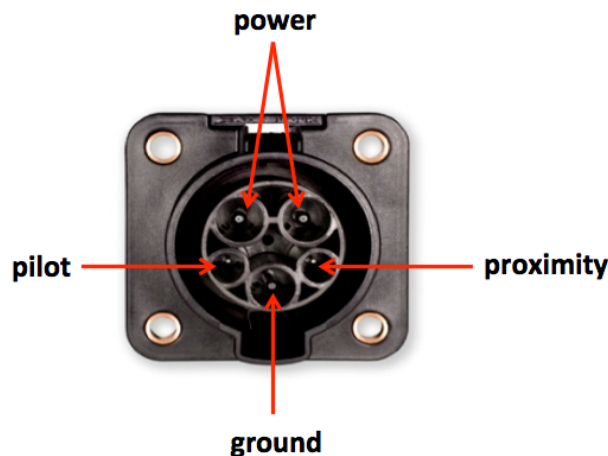


Figure 6 – Face of J1772 Socket

The **Proximity** signal (C3) allows the EV and the EVSE to determine whether the J1772 charge plug is “disconnected”, “connected” or “locked”. When the J1772 charge plug is fully inserted, it is “locked”. When the charger release button is pressed (by thumb on the charger plug), the charge plug becomes “unlocked”, or simply “connected”. Should the plug become “unlocked” while charging, charging will immediately stop.

The **Pilot** signal (C2) allows the EVSE to advertise how much power is available for charging, and it allows the EV to control when to start and stop charging.

The EVCC determines how much current is available from the line by measuring the duty cycle of the J1772 Pilot square wave. This can be used along with other configured information in the EVCC to determine the charging current.

The EVCC controls when to start and stop charging by switching an appropriate diode and resistor between the J1772 **Pilot** signal to GND. The EVSE monitors J1772 **Pilot** and only connects mains power if requested to do so.

The figure below shows the J1772 connections.

	A	B	C	D	E	F
1	12V	GND	Ext_Ind	Loop1	12V_Sw	CANH
2	Ignition	GND	Pilot	Loop2	GND	CANL
3	GND	P_Select	Proximity	PackFault	OKToDrive	

Figure 7 – J1772 Connections

IMPORTANT: During installation, ensure that there is a good ground connection between the EV Chassis, J1772 Ground, and EVCC GND. A poor ground connection can result in nonoperation or erratic operation of the J1772 circuitry.

For more information on J1772 see http://en.wikipedia.org/wiki/SAE_J1772 and <https://code.google.com/p/open-evse/wiki/J1772Basics>).

The following schematic summarizes the connections required for J1772.

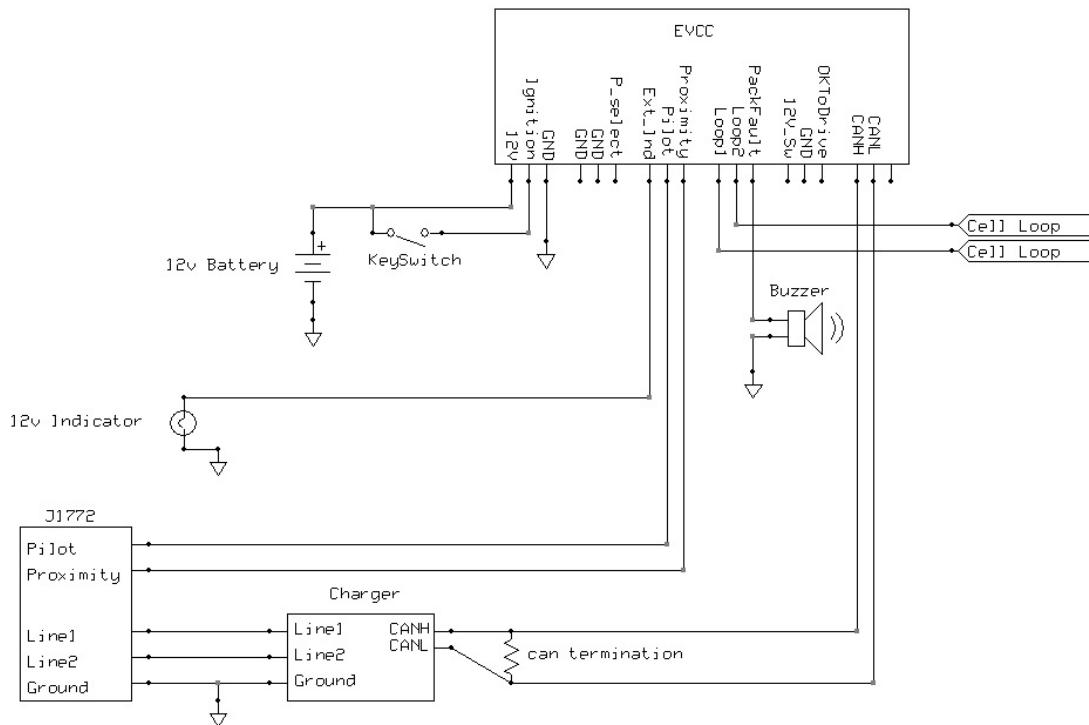


Figure 8 - Wiring With J1772

Wiring Without J1772

Although J1772 is recommended, its use is optional. When using J1772, the EVCC **Proximity** signal is connected to ground through a 150 ohm resistor built into the J1772 charge plug. This indicates that the charge plug has been plugged in and is “locked”. When J1772 is not being used, the EVCC **Proximity** must either be connected directly (or through a switch) to GND to allow charging.

Here are two wiring options that do not use J1772:

Option 1 retains most EVCC functionality.

- Wire **Proximity** to **GND** through a switch (a “charger present” switch). This is an additional, latching, SPST switch such as a toggle switch. To use this feature, plug in the charger, and close the “charger present” switch. Charging operates as designed and the EVCC turns itself off when complete. The EVCC Drive mode operates as designed (**Ignition** enables the EVCC, the cell loop operates the buzzer). If driveaway protection is implemented, the “charger present” switch must be turned OFF in order to operate the EV.

Option 2 is used when the EVCC is only used for charging.

- Wire **Proximity** directly to **GND**. To charge, plug in the charger, and apply 12V to **Ignition** and **12V**. The EVCC will power up and begin charging. When the EVCC completes charging, it will stop sending CAN messages to the charger, but will remain powered ON until power is removed from **Ignition**. To start charging again, it is necessary to cycle power to the EVCC.

The following schematic shows how to wire up the EVCC without J1772 (option 1):

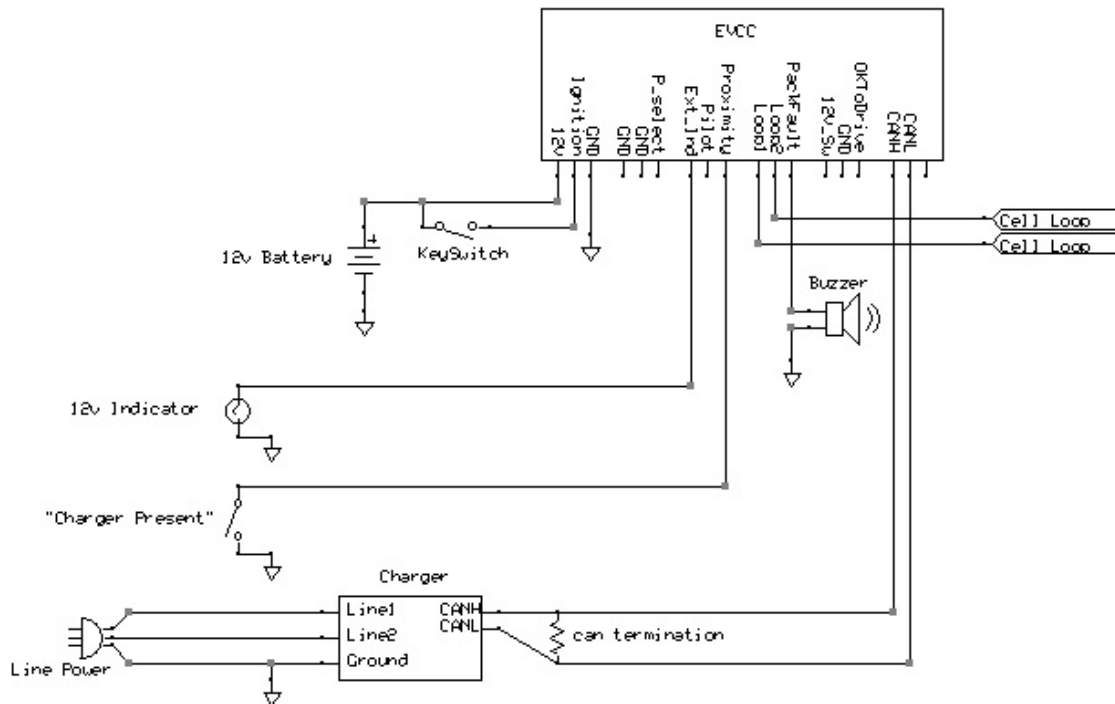


Figure 9 - Wiring Without J1772 (With Charger Present Switch)

The following schematic shows how to wire up the EVCC without J1772 (option 2):

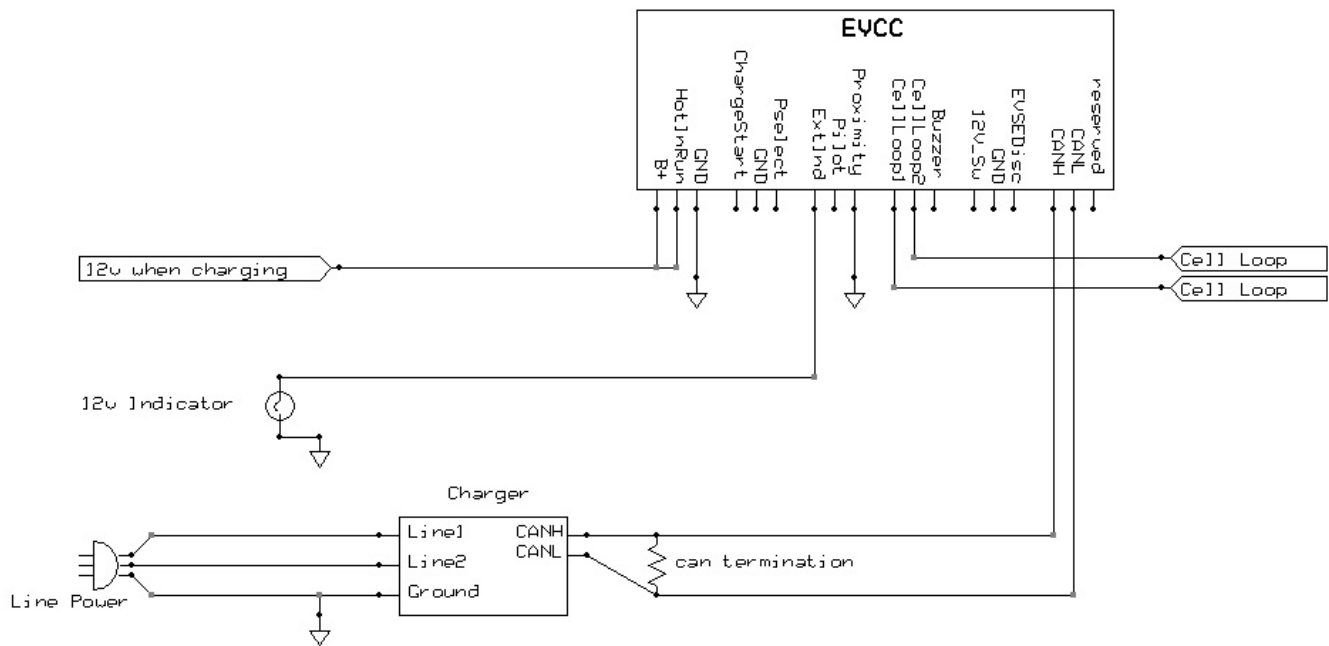


Figure 10 - Wiring Without J1772 (Charging only)

Cell Loop and Pack Fault

The EVCC is intended to be used with a Battery Management System that monitors per-cell over voltage conditions when charging and per-cell undervoltage when driving. The EVCC Cell Loop surveillance provides a “go/no-go” indication of whether there is a Pack Fault condition.

The Cell Loop may be configured in one of two ways.

By default, the Cell Loop circuit measures the resistance between **Loop1** (D1) and **Loop2** (D2). The circuit applies +5v to Cell Loop1, and checks for continuity between D1 and D2. It is expected that the Cell Loop be implemented using a solid state relays or optoisolators. Connecting the cell loop to the contacts of a mechanical relay is not recommended, as the cell loop current is limited to about 2ma this may not provide enough “wetting current” for the relay contacts.

Alternately, the Cell Loop may be configured to use an open collector input. See the **loopground**, option below. If this option is set, then the Loop1 input is not connected. If Loop2 is open then this is a Pack Fault; if Loop2 is grounded, then this indicates that the Cell Loop is “good”. In practice, Loop2 should be connected to an open collector output (say, of a BMS) that is switched to ground to indicate that the loop is “good”. (Once again, connecting this input to the contacts of a mechanical relay is not recommended).

The **PackFault** (D3) output provides up to 500ma at 12V that can be used to sound a buzzer when there is a pack fault error. The operation of the buzzer depends on how cell surveillance is configured in the EVCC. By default, cell surveillance is performed by the cell loop. However, cell surveillance can also be disabled, performed by a CAN BMS, or performed by both the cell loop and the CAN BMS. (See the command **set bms**, below).

WARNING: It is strongly recommended that per-cell monitoring be performed on the pack so that charging can be stopped if any cell exceeds a high voltage or low voltage cutoff. Lithium batteries can be dangerous if overcharged or undercharged.

The figure below shows the Cell Loop and Pack Fault connections.

	A	B	C	D	E	F
1	12V	GND	Ext_Ind	Loop1	12V_Sw	CANH
2	Ignition	GND	Pilot	Loop2	GND	CANL
3	GND	P_Select	Proximity	PackFault	OKToDrive	

Figure 11 – Cell Loop and Pack Fault Connections

Driveaway Protection

Driveaway Protection is a failsafe mechanism that prevents the EV being driven if the charger plug is connected. This feature is implemented by signal **OKToDrive** (E3). This is an “open collector” signal to ground, fused to 200ma.

The signal is open if the J1772 cable is plugged in (or if the EVCC is not powered). Conversely, the **OKToDrive** input is switched to ground if the EVCC is powered up and the cable is not plugged in. That is, **OKToDrive** is grounded if it is “ok to drive”.

How to disable the EV from driving is up to the discretion EV designer. These contacts could be wired into the control logic of the primary contactor.

Note: The OKToDrive contacts may not be suitable for direct control of a primary contactor. A typical primary contactor requires 1A or more of holding current which is well above the 200ma fused limit.

The figure below shows the connections used for Driveaway Protection.

	A	B	C	D	E	F
1	12V	GND	Ext_Ind	Loop1	12V_Sw	CANH
2	Ignition	GND	Pilot	Loop2	GND	CANL
3	GND	P_Select	Proximity	PackFault	OKToDrive	

Figure 12 – Driveaway Protection Connections

Profile Selection

Up to four charging profiles may be defined with the EVCC, numbered from 1 to 4. Each profile contains a complete copy of all charging parameters. By default, Profile 1 is created and is used by default. A new profile may be defined using the “**set profile**” command and then editing the charge parameters for that profile.

When charging, a profile is selected using the **P_Select** input (B3). The EVCC measures the resistance to GND at this input and deduces four possible selections: “inf”, 20K, 5K, and “0”. If the **P_Select** input is left unconnected, it will read “open” (or “infinite” resistance), and maps to “inf”. If the **P_Select** input is shorted to ground it will measure “0”. Finally, if a resistor is connected between the **P_Select** input and ground, the remaining two choices “20K” and “5K” can be selected). The EV designer may decide to leave this feature unused, connect the input to a switch to GND to enable two profiles, or connect it to a multi-position switch and a resistor network and enable up to four profiles.

In operation, these four inputs represent a “switch setting” and not a “profile number”. The mapping from setting to profile number is done using the profile map. (See the command “set map”). So, for example, “inf” might be mapped to “Profile 1”, and “0” might be mapped to “Profile 2”.

	A	B	C	D	E	F
1	12V	GND	Ext_Ind	Loop1	12V_Sw	CANH
2	Ignition	GND	Pilot	Loop2	GND	CANL
3	GND	P_Select	Proximity	PackFault	OKToDrive	

Figure 13 – Profile Selection Connections

CANBUS

CAN is a robust communications protocol designed for automotive applications. CAN uses a two wire interface; the signals are designated CANH (“CAN high”) and CANL (“CAN low”). Not shown, but necessary, is that each node on the CAN network must share a common ground (e.g., chassis ground). A CAN network is a daisy-chain, multistation network that must be terminated on both ends of the string by 120ohm termination resistors. See below for a simple network diagram.

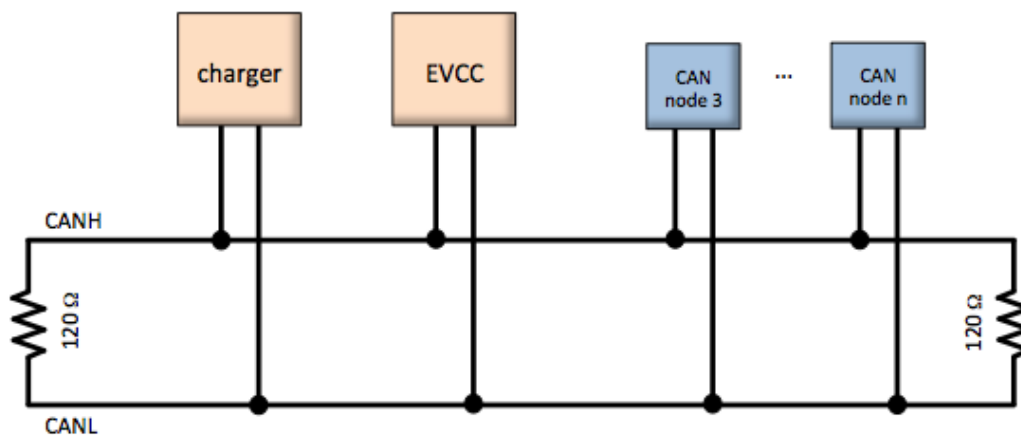


Figure 14 – CAN Network Diagram

CAN wiring should be kept short and the conductors should be twisted. Wiring stubs between the CAN network and the node should be kept as short as possible, ideally less than a few inches. Network wiring should be placed away from EMI (ElectroMagnetic Interference) such as the motor and controller, and parallel runs next to EV traction cabling should be avoided.

In a simple installation, there will be only two nodes on the CAN network: the charger and the EVCC, with a short and direct connection between the two. In this simple case, a short run of hand-twisted wiring should work fine.

For longer runs, more nodes, or cases where EMI may be an issue, shielded cable may be needed. If a shielded cable is used, the shield should be connected to chassis ground at a single place.

The figure below shows the connections used for CAN.

	A	B	C	D	E	F
1	12V	GND	Ext_Ind	Loop1	12V_Sw	CANH
2	Ignition	GND	Pilot	Loop2	GND	CANL
3	GND	P_Select	Proximity	PackFault	OKToDrive	

Figure 15 – CAN Connections

To simplify CAN network wiring, the EVCC contains an internal, configurable, CAN termination resistor. By default, this termination is enabled. (When the EVCC is used as an intermediate node, the termination resistor may be disabled by using the CLI command “**set cantermdis**”).

When installing the CAN network, keep in mind that some CAN devices contain an internal termination resistor and must be installed at the end of the CAN string. In order to verify the proper CAN terminations, make all connections and measure the resistance between CANH and CANL. The resistance between CANH and CANL should be 60 ohms, which indicates the presence of two 120 ohm resistors in parallel.

Note that the internal EVCC termination resistor is not bridged onto the CAN network unless the EVCC is powered up. This design choice will cover the vast majority of installation scenarios. However, there is one case where this may not be acceptable, namely when (1) the EVCC is a terminal node and (2) the CAN network is active with other devices and the EVCC is powered down. In this (rare) case, the recommendation is to disable the termination resistor in the EVCC and connect a physical resistor instead.

CAN Protocol

The EVCC supports a single CAN interface, which normally runs at 250Kbs and uses 29-bit Extended Identifiers. These parameters are not software configurable, however, both the TSM2500 and ELCON chargers require this rate. (Beta support is available for the Lear charger which reconfigures the CAN data rate to 500kbps).

The EVCC uses two types of messages to control a CAN enabled charger. The first, from EVCC to Charger, provides the Charger with the desired values of charge voltage and charge current, and the second message, from Charger to EVCC that reports the actual Charging Voltage and Current. This message may also report additional charger status.

EVCC/Charger CAN messages are sent approximately twice a second, both from EVCC to Charger and from Charger to EVCC. If either the EVCC stops receiving these periodic messages, charging will terminate with a termination reason of “Charger Rx Timeout”.

EVCC/BMS CAN messages communicate pack status such as Cell Undervoltage or Cell Overvoltage conditions. These messages are used as an alternate to (or conjunction with) the cell loop to indicate pack fault conditions. See *Integration with a CAN enabled BMS*, below, for more details.

CAN and Charger Message Trace

CAN messages may be lost or corrupted as the result of EMI, stubs that are too long, or improperly terminated cables. The CAN protocol has sophisticated error detection and recovery mechanisms that allow for automatic retry and recovery as well as ways of detecting and isolating misbehaving nodes.

In order to verify correct operation there are both high level tracing (“**trace charger**”) and a low level tracing (“**trace can**”) facilities to show CAN message traffic.

LED Operation

The EVCC LED has the following blink patterns:

Timeline (seconds)	0	.5	1	1.5	2	2.5	3	3.5		
DRIVE MODE										
No error										solid ON
Pack Error										fast blink (4x/second)
Charge Failure										long ON, short OFF
Warmdown										slow short blink
CHARGE MODE										
Charging (profile 1)										medium blink (1x/second)
Charging (profile 2)										1x short blink, 1 medium blink
Charging (profile 3)										2x short blink, 1 medium blink
Charging (profile 4)										3x short blink, 1 medium blink
BOOTLOADER MODE										
Waiting										very slow blink (1x/4 seconds)
Loading										very fast blink (>10x/second)

Figure 16 – EVCC Blink Patterns

Charging

This section describes the charging process in more detail.

Determining Charge Voltage and Charge Current

The maximum charge voltage is specified by the EVCC parameter “**maxv**”. This parameter must be configured by the user.

The maximum charge current can be determined by several methods, and depends on how much information that the user provides. These are described in more detail below.

Using maxc only: The user can specify the maximum charge current explicitly (**maxc**) and set no other parameters. In this case, the EVCC will use **maxc** for the charge current.

$$\text{ChargeCurrent} = \text{maxc}$$

Set linev and linec, do not configure maxc: In this case, the user specifies available line voltage and line current from the service connection and does not configure maxc. This approach will perform a power calculation as a convenience for the user. When the EVCC computes the maximum power available from the service it derates it by a nominal 90% charger efficiency, and then computes an appropriate value for ChargeCurrent.

$$\text{ChargeCurrent} = (\text{linev} * \text{linec} * .9) / \text{maxv}$$

Set linev, linec and maxc: In this EVCC performs a power calculation and uses the minimum of power available and maxc.

$$\text{ChargeCurrent} = \min(\text{maxc}, (\text{linev} * \text{linec} * .9) / \text{maxv})$$

Set linec to “J1772”, do not configure linev or maxc: In this case, the user specifies available line current to be “J1772”. In this case, the EVCC measures the J1772 Pilot signal duty cycle in percent (J1772DutyCycle) and converts

it to available charge current (per J1772 this is given as 6A of charge current per 10% duty cycle). Line voltage is not known in this case, and so the EVCC uses the following rule. If the duty cycle is > 25% then the line voltage is assumed to be 220V, and if the duty cycle is less than 25%, then the available line voltage is 110V.

$$\begin{aligned} \text{ChargeCurrent} &= (220 * (\text{J1772DutyCycle} * 6) * .9) / \mathbf{maxv} && ; \text{ if J1772DutyCycle} > 25 \\ &= (110 * (\text{J1772DutyCycle} * 6) * .9) / \mathbf{maxv} && ; \text{ if J1772DutyCycle} \leq 25 \end{aligned}$$

These design assumptions are driven by what is currently available in the market today in North America. EVSE equipment typically of two types: one that connects at 220V, rated at 30A, with a 50% duty cycle. The second type of equipment connects at 110V, rated at 12A, with a 20% duty cycle.

Set linec to “J1772”, set linev, do not configure maxc: In this case, the user specifies available line current to be “J1772”, and specifies the line voltage. This case is similar to the previous, however the line voltage is now known.

$$\text{ChargeCurrent} = (\mathbf{linev} * (\text{J1772DutyCycle} * 6) * .9) / \mathbf{maxv}$$

As a final comment, note that the power capability of the charger is not configured in the EVCC. In practice, if the requested power is more than what the charger can deliver, charger firmware will reduce the delivered current in order to stay within its power limits.

Examples

Let’s suppose a user wants to use different EVSE charging stations: a primary EVSE at home capable of 220V at 30A, a secondary EVSE capable of 110V at 15A, and also wants the ability to do J1772 opportunity charging in general.

This could be configured in the EVSE with three charge profiles:

- 1) Primary EVSE. Define **maxv**, **linev=220**, **linec=30**. In this case, the EVCC will compute the charge current. (Alternately the user could define **maxv** and **maxc** directly, or could use profile 3, below).
- 2) Secondary EVSE. Define **maxv**, **linev=110**, **linec=15**
- 3) Opportunity Charging. Define **maxv**, **linec=J1772**.

Determining Charge Parameters for Sealed Lead Acid Batteries


The EVCC supports a three phase charging algorithm to charge SLA batteries. The first phase (the “bulk” phase) is used by both Lithium and SLA batteries. The remaining phases, “finishing” and “float” have target voltage and current limits (**fin_maxv**, **fin_maxc**, **flt_maxv**, **flt_maxc**). The discussion above about voltage and current calculation applies equally to these two additional SLA charging phases, simply replace “xxx_maxv” and “xxx_maxc” for “maxv” and “maxc”.

Configuration

Serial Port

Before using the serial port, host computer drivers and a terminal application must be installed. See the document *Driver Installation* for details.

Connect the serial cable to the EVCC. Apply power to the EVCC by providing a 12V supply to **12V** and **GND**. Connect +12V to **Ignition**. The EVCC **LED** should start blinking (assuming the cell loop has not been hooked up yet), and the following banner should be displayed:

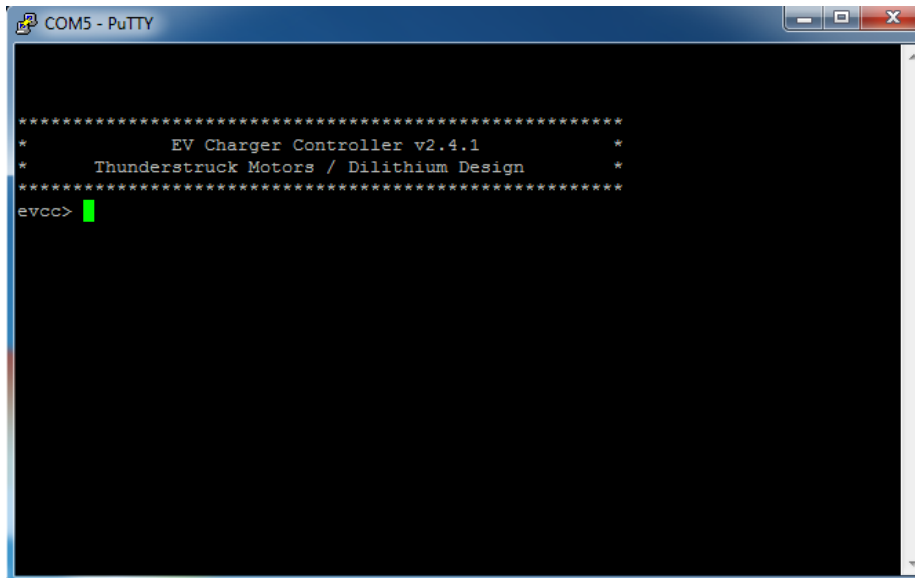

```

COM5 - PuTTY
*****
*           EV Charger Controller v2.4.1           *
*   Thunderstruck Motors / Dilithium Design   *
*****
evcc>

```

At this point, the EVCC may be configured. Configuration is stored in non-volatile memory and retained across a power cycle. See below, *Command Line Interface*, for details on what commands are supported and their syntax.

The EVCC is supplied with defaults, but at the very minimum, it will be necessary to set the Maximum Charging Voltage (using the command “**set maxv**”) and Maximum Charging Current (using the command “**set maxc**”).

WARNING: Lithium batteries can be dangerous if overcharged and it is strongly recommended that the user check with their battery supplier to determine appropriate charging parameters.

A bringup checklist is provided below. The EVCC also has several diagnostic commands that can be used to verify proper wiring (“**measure**”), to trace can messages (“**trace can**”), to trace EVCC internal state changes (“**trace state**”) and to trace charger operation (“**trace charger**”).

Charger Support

This section gives details on which charger types are supported by the EVCC. Each charger in an installation requires a unique CAN address. In EVCC terminology a “charger type” refers to both the manufacturer and its unique CAN address.

TSM2500

See *TSM2500 Series High Efficiency Intelligent Charger, ThunderStruck User Manual Ver 1.0.5*.

<http://www.thunderstruck-ev.com/images/ThunderStruck%20TSM2500%20ManualV1.05.pdf>.

The CAN connections are found on the four pin connector J3. CANL is pin #8 (wired with a blue wire) and CANH is pin #9 (wired with a green wire). No other connections are required on J3.

The TSM2500 charger does not have an integrated termination resistor. It is configured with a default CAN address however the CAN address can be reprogrammed. The procedure to program the addresses is described below (Setting the CAN address of a TSM2500 Charger). Note that address programming may have been done at Thunderstruck as part of the order.

The EVCC defines the following TSM2500 charger types:

- tsm2500 - default
- tsm2500_41
- tsm2500_42
- tsm2500_43

The default value for tsm2500 chargers is “40”. (Which is to say, the EVCC uses the CAN address 0x18e54024 for messages TO the charger and 0x18eb2440 FROM the charger to the EVCC).

The TSM2500 can report the following errors:

- rxerr
- hwfail
- overtemp
- not charging
- input voltage err
- pack voltage err

These strings would be printed in “trace charger” output.

ELCON

ELCON chargers must be programmed with the CAN option. In addition, an external ELCON-provided CAN module is needed that terminates the CAN and communicates to the charger over a serial interface. Only two pins are provided for the CAN connection: CANH and CANL. The ELCON CAN module does NOT contain an integrated termination resistor.

The CAN addresses of the ELCON chargers are determined by the outboard serial to CAN converter. In order to change the CAN address, a different serial to CAN module is needed.

The EVCC supports the following ELCON charger types:

- elcon - default
- elcon_e7

- `elcon_e8`
- `elcon_e9`

The default value for ELCON chargers is “E5”. (Which is to say, the EVCC uses the CAN address 1806e5f4 for messages TO the charger and 18ff50e5 FROM the charger to the EVCC).

The ELCON charger can generate the following errors:

- `rxerr`
- `hwfail`
- `overtemp`
- `input voltage err`
- `pack voltage err`

These strings would be printed in “trace charger” output.

LEAR

EVCC firmware v2.3.5 and later supports beta code for some Lear chargers. This support is limited to the “control message” to the charger with CAN ID “0x00000050” and the status message from the charger with CAN ID “0x000000617”. It has been found that not all Lear chargers use these messages (due to different firmware) and may not support this message set.

The EVCC only defines a single lear charger type, named “lear”. When a Lear charger is configured, the CAN datarate is changed from the default of 250kbps to the Lear required 500kbps.

Lear charger support has a number of limitations:

- Only one Lear charger may be configured. Having more than one Lear charger is not supported. Having one Lear charger and another non-Lear charger is not supported.
- If a CAN enabled BMS is being used with the EVCC, it must be configured for a 500kbps datarate.

Determining the CAN addresses of a Charger

If it is necessary to determine the CAN ID of a charger, then power up the chargers individually and use the debugging command **trace can** messages to determine what IDs are being used. The chargers will transmit these messages spontaneously, and it is not necessary to configure the charger in the EVCC to perform this test.

Bringup Checklist and Troubleshooting Hints

EV Installation

- 1) Connect 12V, GND, Ignition
- 2) Connect Proximity, Pilot, GND
- 3) Connect P_Select to a selector switch (and resistor array), if used

Verify Analog Inputs

- 1) Type “**measure**” with no parameters to get the expected readings for each analog input. Note that if there is not a good ground connection between J1772 ground and EV chassis ground that the J1772 readings will be erratic.
- 2) Verify Cell Loop, using “**measure loop**”
 - a. Disconnect J1772 plug if connected
 - b. Verify readings with cell loop open and closed.
- 3) Verify Proximity, using “**measure proximity**”
 - a. Disconnect cell loop, if connected
 - b. Verify readings with charger plug disconnected, connected, and unlocked.
- 4) Verify Cutback, if used, using “**measure pselect**”.
 - a. Verify readings with different pselect switch settings.

Verify J1772

- 1) Connect Cell Loop to CellLoop1 and CellLoop2.
- 2) Plug in J1772 Plug
- 3) The EVCC should attempt to start charging (LED blinks once per second).
- 4) Assuming the CAN bus is not connected to the charger yet, the charge cycle should stop after 10-15 seconds.
- 5) Remove 12V from Ignition, unplug the J1772.
- 6) Verify the “autostart” by plugging in the J1772 plug. The EVCC should power up and go into the Charge state.
- 7) For debugging, use “**trace state**” to verify that the EVCC attempts to start charging if the J1772 plug is in and the user powers up the EVCC.

Verify Charger and CAN

- 1) Connect Charger to J1772, connect CAN between Charger and EVCC.
- 2) Verify proper installation of the CAN termination resistors. Measure between CANH and CANL to verify that the resistance of 60ohms. Remember that if the internal EVCC termination resistor is used, that it must be powered up in order to make this measurement.
- 3) Now verify that when a charge cycle is started, that messages are exchanged between EVCC and Charger. (Use “**trace charger**” or “**trace can**” to log the messages).
- 4) If the pack is not yet connected to the Charger, the charge cycle will stop after a minute.

Systems Test

- 1) Verify all systems functions.

Firmware Upgrade

The EVCC firmware may be upgraded by the customer using the serial port. Firmware upgrade is supported in EVCC version v2.3.7 and later. EVCC versions earlier than v2.3.7 must be returned for reprogramming.

Contact Thunderstruck if a firmware upgrade is needed.

Command Line Interface

Startup Banner

When the EVCC is powered up, it will print the following:

```
*****
*           EV Charger Controller v2.4.1           *
*   Thunderstruck Motors / Dilithium Design   *
*****
evcc>
```

help

The **help** command prints out command help.

```
evcc> help
  SHow [<>|Version|Config|History]
        <>      - status
        version - firmware version
        config  - configuration
        history - charge history

  SEt [ <>
        |BMS
        |CHARGER|CHARGER2|CHARGER3|CHARGER4
        |Profile|MAP
        |EXTINDCHARGE|CANTERMDis|TOPBALANCE|LOOPGROUND
        |LINEV|LINEC
        |MAXV|MAXC|MAXBC|TERMC|TERMT
        |FIN_MAXV|FIN_MAXC|FIN_TERMT
        |FLT_MAXV|FLT_MAXC|FLT_TERMT
    ]

  REset [History|PROFILE|EXTINDCHARGE|CANTERMDis|TOPBALANCE|LOOPGROUND]
        history      - reset charge history
        profile <n>  - deletes a charge profile
        extindcharge - reset EXTIND to default (EVCC LED)
        cantermdis  - reset CAN termination to default (enabled)
        topbalance  - reset the 'top balance' feature (see documentation)
        loopground  - reset 'loopground'; use normal cell loop

  TRace [Charger|CANbus|SState|OFF]
        <>          - trace toggle ON/OFF
        charger    - trace charger messages
        canbus     - trace canbus messages
        state      - trace EVCC state changes
        off        - disable all tracing

  MEasure [<>|LOOP|PROXimity|PSElect]
        <>          - 'measure' help
        loop       - measure Cell Loop A/D
        proximity  - measure J1772 Proximity A/D
        pselect   - measure Profile Selection A/D

  UPGRADE          - performs a firmware upgrade
```

In most cases, either a full version or an abbreviated version of a command (or command parameter) can be used. This is shown in the “help” with the use of uppercase and lowercase letters. For example, the abbreviation for **show** is **sh**, and the abbreviation for **show config** is **sh c**.

show

The **show** command displays configured parameters or status. If “show” is entered without parameters, current status will be displayed.

In the Drive mode, the EVCC monitors the cell loop and operates the buzzer when the cell loop indicates a pack fault.

```
evcc> show
state      : DRIVE
cell loop: OK
proximity: EVSE not connected
buzzer     : OFF
uptime     : 0 hour(s), 0 minute(s), 33 second(s)
```

If, instead, the bms configuration is set to “can” instead of “loop”, the output would be the following:

```
evcc> set bms can
evcc> show
state      : DRIVE
can bms    : OK
proximity: EVSE not connected
buzzer     : ON
uptime     : 0 hour(s), 0 minute(s), 33 second(s)
```

In the CHARGE mode, the EV is charging.

```
evcc> show
state      : CHARGE
cell loop: OK
proximity: EVSE Connected and locked
buzzer     : OFF
J1772      : duty cycle= 50%, line current available= 30.0A
charger    : tsm2500
  status   : 14 msgs sent; 11 msgs received
  voltage  : 53.4V-
  current  : 1.9A
  charge   : 0.12Wh
uptime     : 0 hour(s), 2 minute(s), 0 second(s)
```

show version

The **version** command displays firmware version number and build date.

```
evcc> show version
version    : v2.4.1; Apr 7 2016 14:25:17
evcc>
```

show config

The **show config** command displays configuration parameters. At its simplest, the output of **show config** is the following:

```
evcc> show config
bms        : loop
charger    : tsm2500
maxv       : 20.0V
maxc       : 2.0A
termc      : 0.2A
termt      : 720.0hr
```

The output of **show config** becomes progressively more complex as more features are enabled. If only one charge profile is defined, the full set of configured parameters is given below:

- `bms` - the bms type (loop, can, or both)
- `charger` - the configured charger type
- `charger2` - (if configured) types of chargers2
- `charger3` - (if configured) type of chargers3
- `charger4` - (if configured) type of chargers4
- `linev` - (if configured) line voltage of service connection
- `linec` - (if configured) line current of service connection
- `maxv` - maximum charging voltage (in Volts).
- `maxc` - maximum charging current (in Amps).
- `maxbc` - (if configured) maximum balance current
- `termc` - terminating charging current (in Amps).
- `termt` - maximum charging time (in minutes).
- `fin_maxv` - (if configured) finishing charge voltage (for SLA charging)
- `fin_maxc` - (if configured) finishing charge current (for SLA charging)
- `fin_termt` - (if configured) finishing charge current (for SLA charging)
- `fln_maxv` - (if configured) float charge voltage (for SLA charging)
- `fln_maxc` - (if configured) float charge current (for SLA charging)
- `fln_termt` - (if configured) float charge current (for SLA charging)
- `options` - `extindcharge` (if configured) – ExtInd tracks CHARGE state
- `cantermdis` (if configured) – can termination resistor disabled
- `topbalance` (if configured) – enable ‘top balance’ feature
- `loopground` (if configured) – enables open collector cell loop surveillance

An example of a full output with all options is shown below:

```
evcc> show c
bms      : loop
charger  : tsm2500
charger2 : tsm2500_42
charger3 : tsm2500_43
charger4 : elcon
linev    : 220.0V
linec    : 30.0A
maxv     : 155.0V
maxc     : 15.0A
maxbc    : 1.2A
termc    : 0.2A
termt    : 6.0hr
fin_maxv : 160.0V
fin_maxc : 2.0A
fin_termt : 4.0hr
flt_maxv : 152.0V
flt_maxc : 0.5A
flt_termt : 0.0hr
options  : extindcharge (ExtInd is ON when 'charging')
          : cantermdis (CAN termination resistor disabled)
          : topbalance (see documentation)
          : loopground (ignore loop1; apply ground to loop2 if OK)
```

If more than one charge profile is defined, **show config** will display the four charge profiles in “tabular form”. The charge profile selected for editing is indicated with a “*”. Also, the profile map is shown.

Example output with multiple charge profiles is shown below:

```
evcc> show c
bms      : loop
charger  : tsm2500
profiles :    1          2*          3          4
  linev  : 220.0V
  linec  : 30.0A      J1772
  maxv   : 155.0V    152.0V
  maxc   : 15.0A     2.0A
  maxbc  : 1.2A
  termc  : 0.2A      0.2A
  termt  : 6.0hr    8.0hr
  fin_maxv : 160.0V
  fin_maxc : 2.0A
  fin_termt: 4.0hr
  flt_maxv : 152.0V
  flt_maxc : 0.5A
  flt_termt: 0.0hr
profile map:
  inf    : x
  20K    : x
  5K     : x
  0      :          x
```

show history

The **show history** command displays data about the last sixteen charge cycles. See also **reset history**, below.

In the first example, the system has no charge history yet.

```
evcc> show history
no charge history
```

The next example shows charge history, with different “termination reasons”. The termination reason contains the reason that the charge cycle stopped. In this example, in the most recent charge attempt, the user disconnected the J1772 plug one minute after charging started. (EVSE disc, 1 mins). The previous attempt (“-1”) shows a normal charge completion with a charge time of 214 minutes and includes the number of watt hours delivered.

Note that the voltage and current measurements are provided by the charger in the CAN message to the EVCC. The EVCC does not measure pack voltage or current.

```
evcc> show history
```

num	term reason	charge time	charger	watt hours	maximum voltage	maximum current	ending current
last	EVSE disc	1 mins	tsm2500	7Wh	148.9V	7.9A	7.9A
- 1	normal	214 mins	tsm2500	3249Wh	152.9V	7.9A	0.5A
- 2	EVSE disc	1 mins	tsm2500	0Wh	144.8V	0.0A	0.0A
- 3	comm err	0 mins	tsm2500	0Wh	0.0V	0.0A	0.0A

```
evcc>
```

The full set of “term reason” codes is:

- EVSE disc - J1772 charge plug became unlocked while charging
- pack flt - a cell loop fault or HVC condition was detected
- comm err - communications error with the charger
- pack disc - no pack was detected
- timeout - the maximum charge time was reached
- normal - normal completion (charge current is less than terminating charging current)
- fintimeout - finishing charge timeout
- fin normal - normal termination of finishing charge
- flttimeout - float charge timeout

When multiple chargers are configured, the format of the charge history is modified to show the contribution of each charger.

```
evcc> show history
```

num	term reason	charge time	charger	watt hours	maximum voltage	maximum current	ending current
last	EVSE disc	2 mins	tsm2500	6Wh	127.8V	2.2A	0.0A
			tsm2500_42	6Wh	127.5V	2.0A	0.0A
			TOTAL	12Wh	127.8V	4.2A	0.0A

set

This command sets the configurable parameters. For voltage and current, whole numbers (145) or decimal numbers (145.2) can be entered. The EVCC supports one decimal digit of precision.

set <>

Using the **set** with no parameters will option will print help for the “set” command.

```
evcc> set
```

```
SEt [ <>
  |BMS
  |CHARGER|CHARGER2|CHARGER3|CHARGER4
  |Profile|MAP
  |EXTINDCHARGE|CANTERMDIS|TOPBALANCE|LOOPGROUND
  |LINEV|LINEC
  |MAXV|MAXC|MAXBC|TERMC|TERMT
  |FIN_MAXV|FIN_MAXC|FIN_TERMT
  |FLT_MAXV|FLT_MAXC|FLT_TERMT
]
<> - 'set' help
bms configuration
set bms [NONE|LOOP|CAN|LOOP,CAN]
charger configuration
<chargern> - [CHARGER|CHARGER2|CHARGER3|CHARGER4]
<type> - [ TSM2500|TSM2500_41|TSM2500_42|TSM2500_43
|ELCON |ELCON_E7 |ELCON_E8 |ELCON_E9
|LEAR]
set <chargern> <type> - defines <chargern>
set <chargern> NONE - deletes <chargern>
set <chargern> <type> PROGRAM - programs tsm2500 CAN IDs
profile editing
set profile <n> - set profile for editing
set map [inf|20K|5K|0|all] <n>
```

```

- set profile mapping
options
  set extindcharge - ExtInd is ON when 'charging'
  set cantermdis  - disables the CAN termination resistor
  set topbalance  - enables top balancing (see documentation)
  set loopground  - enables open collector cell loop surveillance
Service parameters
  set linev <v>      - available line voltage
  set linec [<a>|J1772] - available line current
BULK charge parameters
  set maxv <v>      - maximum charge voltage
  set maxc <a>      - maximum charge current
  set maxbc <a>     - maximum balancing current
  set termc <a>     - charge termination current
  set termt <h>    - charge termination timeout
SLA charge parameters
  set fin_maxv <v> - finishing charge voltage
  set fin_maxc <a> - finishing charge current
  set fin_termt <h> - finishing charge termination timeout
  set flt_maxv <v> - float charge voltage
  set flt_maxc <a> - float charge current
  set flt_termt <h> - float charge termination timeout (0=no timeout)

```

set bms

This sets the BMS type. The EVCC can use a cell loop and/or up to four CAN BMSs. The BMS determines whether a cell in the pack has exceeded the High Voltage Cutoff, Low Voltage Cutoff, or Balance Voltage Cutoff. Multiple BMSs can be defined.

The following example just sets the bms type to be the cell loop.

```
evcc> set bms loop
```

The next example sets the bms to use CAN messaging.

```
evcc> set bms can
```

The next example sets the bms to use both cell loop and CAN messaging.

```
evcc> set bms loop, can
```

set charger<n>

This sets the charger type. The first charger is named “charger”. Chargers 2 through 4 are named “charger2”, “charger3”, “charger4”.

The following command sets a single charger

```
evcc> set charger tsm2500
```

The following command sets a second charger

```
evcc> set charger2 tsm2500_42
```

set profile <n>

This command selects a profile for editing. There are four possible profiles: 1-4. Initially, only profile 1 is defined: it is the default profile and cannot be deleted. If the user types “**set profile <n>**”, then this will both select a profile for editing and create the profile if it does not already exist. Once a profile is selected, then subsequent editing commands (e.g., set maxv, etc.) apply to the parameters associated with the profile. Profiles 2-4 may be deleted using the command “**reset profile <n>**”.

Examples of creating and editing profiles:

This is the default configuration:

```
evcc> show config
bms      : loop
charger  : tsm2500
maxv     : 20.0V
maxc     : 2.0A
termc    : 0.2A
termt    : 720.0hr
evcc>
```

This command creates Profile 2 with default configuration:

```
evcc> set profile 2
evcc> show c
bms      : loop
charger  : tsm2500
profiles : 1      2*      3      4
maxv     : 20.0V   20.0V
maxc     : 2.0A    2.0A
termc    : 0.2A    0.2A
termt    : 720.0hr 720.0hr
profile map:
inf      : x
20K      : x
5K       : x
0        : x
```

Now set some parameters in Profile 2:

```
evcc> set maxv 150
evcc> set maxc 12
evcc> show config
bms      : loop
charger  : tsm2500
profiles : 1      2*      3      4
maxv     : 20.0V   150.0V
maxc     : 2.0A    12.0A
termc    : 0.2A    0.2A
termt    : 720.0hr 720.0hr
profile map:
inf      : x
20K      : x
5K       : x
0        : x
```

Now return to Profile 1 and set some parameters in Profile 1:

```
evcc> set profile 1
evcc> set maxv 160
evcc> set maxc 15
evcc> set linec j1772
evcc> show config
bms      : loop
```

```

charger   : tsm2500
profiles  :   1*       2       3       4
linec     : J1772
maxv      : 160.0V   150.0V
maxc      : 15.0A    12.0A
termc     : 0.2A     0.2A
termt     : 720.0hr  720.0hr
profile map:
inf       :   x
20K       :   x
5K        :   x
0         :   x

```

Finally, delete Profile 2:

```

evcc> reset profile 2
evcc> show config
bms       : loop
charger   : tsm2500
linec     : J1772
maxv      : 160.0V
maxc      : 15.0A
termc     : 0.2A
termt     : 720.0hr

```

set map

This command sets the profile map. The EVCC measures resistance to ground at the PSelect input and from the measurement determines four possible choices, as follows:

$R \geq 30K$	the result is "inf"
$30K > R \geq 10K$	the result is "20K"
$10K > R \geq 2K$	the result is "5K"
$20K > R$	the result is "0"

Each result is mapped to a profile using the profile map. Initially all four results select the default profile, Profile 1. If the user wants to use two profiles, a switch to ground may be connected at the PSelect input. If the switch is open then Profile 1 is used and if the switch is closed, then Profile 2 is used. Once Profile 2 is defined, this may be configured as follows:

```

evcc> set map 0 2
evcc> show config
bms       : loop
charger   : tsm2500
profiles  :   1       2*       3       4
linec     : J1772
maxv      : 160.0V   150.0V
maxc      : 15.0A    12.0A
termc     : 0.2A     0.2A
termt     : 720.0hr  720.0hr
profile map:
inf       :   x
20K       :   x
5K        :   x
0         :           x

```

If a third profile were to be defined, a switchable resistor would be required at the PSelect input. The CLI command to enable the mapping from a 5K resistor to Profile 3 would be:

```
evcc> set map 5K 3
```

set extindcharge

The ExtInd output follows the state of the EVCC LED and provides a remote LED indicator. The intention is that a 12V LED or bulb can provide a remote indication of the EVCC state by interpreting the EVCC blink patterns.

However, the operation of the ExtInd output may be redefined to be +12V whenever the EVCC is charging. This might be used, for example, to drive a relay or some other equipment in the EV.

To enable this option use the command:

```
evcc> set extindcharge
```

If this option is set, this will be indicated in the **show config** output.

In order to disable this option, and return the EVCC to default behavior, use the **reset extindcharge** command.

set cantermdis

The EVCC contains an integrated, and programmable CAN termination resistor. By default, this termination resistor is connected to the CAN network. In order to disable this termination resistor, use the command:

```
evcc> set cantermdis
```

If this option is set, this will be indicated in the **show config** output.

In order to disable this option, and return the EVCC to default behavior, use the **reset cantermdis** command.

set topbalance

Normally, the charging cycle terminates when the cell loop opens or when the BMS indicates a pack HVC condition. Some customers may not want to completely stop charging at this stage: instead they may want to suspend charging, allow the pack to rest and for the HVC condition to clear, and to resume charging. The theory is that lower charged cells may be topped up with this process. Enabling this option allows this behavior. In this case, the cell loop / HVC condition does not stop charging, but all other termination reasons (overall time, charge plug disconnected, message timeout, etc) will still apply.

This feature has not been extensively tested, and is in beta.

```
evcc> set topbalance
```

If this option is set, this will be indicated in the **show config** output.

In order to disable this option, and return the EVCC to default behavior, use the **reset topbalance** command.

set loopground

Setting this option will change the method of loop supervision. With the “loopground” option the Cell Loop is considered good if there is a ground on Loop2. (High Impedance means that the cell loop is not good). With this option, Loop1 must be left unconnected.

```
evcc> set loopground
```

If this option is set, this will be indicated in the **show config** output.

In order to disable this option, and return the EVCC to default behavior, use the **reset loopground** command.

set linev_cb, set linec_cb

This sets the maximum line voltage and line current available.

```
evcc> set linev 110
evcc> set linec 12.5
```

Note that the set linec command has “j1772” as an option. In this case, the J1772 duty cycle will be used to determine available line current.

```
evcc> set linec j1772
```

set maxv, set maxc

The command **set maxv** sets the maximum charging voltage, in Volts.
The command **set maxc** sets the maximum charging current, in Amps.

```
evcc> set maxv 155.0
evcc> set maxc 8.5
```

set maxbc

This sets the maximum balancing charging current, in Amps. This option is only possible if a CAN BMS is used and it sends a “BVC threshold exceeded” indication to the EVCC.

```
evcc> set maxbc .7
```

set termc

This sets the termination charging current, in Amps. If the current drops below this setpoint then the charging stops.

```
evcc> set termc .5
```

set termt

This sets the maximum charging time, in hours.

```
evcc> set termt 6.5
```

set fin_maxv, set fin_maxc, set fin_termt

These commands are used to define the “finishing charge” phase voltage, current, and charge time for Sealed Lead Acid battery charging. See below, Finishing Charge for examples of use.

set flt_maxv, set flt_maxc, set flt_termt

These commands are used to define the “float charge” phase voltage, current, and charge time for Sealed Lead Acid battery charging. See below, Float Charge for examples of use.

reset

reset history

The **reset history** command resets the charge history.

```
evcc> reset history
charge history has been reset
evcc>
```

reset profile <n>

The reset profile command can be used to delete Profiles 2-4. It is not possible to delete Profile 1.

```
evcc> reset profile 3
```

reset extindcharge

The **reset extindcharge** command sets the ExtInd output back to default behavior (e.g., ExtInd tracks the EVCC LED).

reset cantermdis

The **reset cantermdis** command sets the CAN termination resistor back to default behavior (e.g., connected).

reset topbalance

The **reset topbalance** command sets the charging behavior back to default (e.g., terminate a charging cycle when there is a cell loop or HVC condition).

reset loopground

The **reset loopground** command sets the cell loop supervision behavior back to default (e.g., measure continuity between Loop1 and Loop2).

trace

The **trace** command enables various forms of message or state tracing. These commands show a timestamp (uptime) and can be useful for logging or debugging. CHARGER, STATE, and CANBUS tracing may be independently enabled.

Trace configuration is stored in EEPROM and is present after reboot.

trace <>

Trace with no parameters toggles state trace on and off.

trace charger

The **trace charger** command displays messages from the charger. This trace also shows the current number of charging watts and the accumulated WattHours of charge.

```
evcc> trace charger
charger tracing is now ON
evcc> 00:08:22.7 V=148.6, A= 7.9, W=1173, Wh= 0.96
00:08:23.1 V=148.6, A= 7.9, W=1173, Wh= 1.12
00:08:23.6 V=148.6, A= 7.9, W=1173, Wh= 1.28
00:08:24.1 V=148.6, A= 7.9, W=1173, Wh= 1.45
00:08:24.6 V=148.6, A= 7.9, W=1173, Wh= 1.61
00:08:25.1 V=148.6, A= 7.9, W=1173, Wh= 1.77
00:08:25.6 V=148.6, A= 7.9, W=1173, Wh= 1.93
00:08:26.1 V=148.6, A= 7.9, W=1173, Wh= 2.08
00:08:26.6 V=148.6, A= 7.9, W=1173, Wh= 2.25
00:08:27.1 V=148.6, A= 7.9, W=1173, Wh= 2.41
00:08:27.6 V=148.6, A= 7.9, W=1173, Wh= 2.57
00:08:28.0 V=148.6, A= 7.9, W=1173, Wh= 2.73
00:08:28.6 V=148.6, A= 7.9, W=1173, Wh= 2.89
00:08:29.0 V=148.6, A= 7.9, W=1173, Wh= 3.05
00:08:29.6 V=148.9, A= 7.9, W=1176, Wh= 3.22
```

trace canbus

The **trace canbus** command displays canbus messages to and from the charger. Each line gives a timestamp, the originator of the message (if known), the CAN ID and CAN message contents, in hexadecimal.

```
evcc> trace can
canbus tracing is now ON
evcc> 00:02:20.9 evcc: 18e54024 fc c8 00 6c 0c 01 ff ff
```

```

00:02:21.4      evcc: 18e54024 fc c8 00 6c 0c 01 ff ff
00:02:21.9      evcc: 18e54024 fc c8 00 6c 0c 01 ff ff
00:02:22.4      evcc: 18e54024 fc c8 00 6c 0c 01 ff ff
00:02:22.5 tsm2500   : 18eb2440 42 f7 41 fd 00 fe 12 dd
00:02:22.9      evcc: 18e54024 fc c8 00 6c 0c 01 ff ff
00:02:22.9 tsm2500   : 18eb2440 04 fd 13 02 80 0c 3f ff
00:02:23.4      evcc: 18e54024 fc c8 00 6c 0c 01 ff ff
00:02:23.5 tsm2500   : 18eb2440 00 fc 13 02 80 0c 3f ff
00:02:23.9      evcc: 18e54024 fc c8 00 6c 0c 01 ff ff
00:02:23.9 tsm2500   : 18eb2440 00 fc 13 02 80 0c 3f ff

```

trace state

The **trace state** command displays internal EVCC state transitions. It shows whether the EVCC is in DRIVE, CHARGE, or CHARGE/WARMDOWN, as well as the state of the J1772 charge plug.

Here is an example of state trace output that shows the charger plug being plugged in and unplugged.

```

evcc> trace state
state tracing is now ON
evcc> 00:06:53.4 old state=DRIVE, new state=CHARGE, j1772=LOCKED, term rsn=0
00:07:16.9 old state=CHARGE, new state=CHARGE/WARMDOWN, j1772=WAITING FOR DISC, term
rsn=EVSE UNLOCKED
00:07:17.2 old state=CHARGE/WARMDOWN, new state=CHARGE/WARMDOWN, j1772=DISCONNECTED,
term rsn=0
00:07:28.9 old state=CHARGE/WARMDOWN, new state=DRIVE, j1772=DISCONNECTED, term rsn=0

```

trace off

The **trace off** command turns off all tracing.

```

evcc> tr off
all tracing is now OFF

```

measure

The **measure** command is used to verify the A/D inputs. When this command is issued, the EVCC will repeatedly measure and print the value of an analog input. The command will run for 30 seconds and then automatically turn itself off. Alternately, the user can stop the command by typing any character.

The **measure** command with no parameters will display the expected values of the A/D inputs.

```

evcc> measure
This command repeatedly shows an analog input for 30 seconds.
Press any key to stop display

```

```

The following values are expected
loop      - Cell Loop A/D
           V > 2.5V - OK
proximity - J1772 Proximity A/D
           V > 4.0V - disconnected
           V > 2.5V - connected
           else    - locked
pselect   - Profile Selection A/D
           R >= 30K   - inf
           30K > R >= 10K - 20K
           10K > R >= 2K  - 5K
           2K > R      - 0

```

```

evcc>

```


measure loop

The **measure loop** command gives a real time measurement of the **cell loop**.

```
evcc> measure loop
evcc> Loop A/D= 4.97V
Loop A/D= 4.97V
Loop A/D= 4.97V
Loop A/D= 4.97V
Loop A/D= 4.97V
```

measure proximity

The **measure proximity** command gives a real time measurement of the **Proximity** input.

In the example given below, both the **measure proximity** and **trace state** commands are enabled. Initially the J1772 charge plug is connected, then it becomes unlocked, and then finally, removed.

```
evcc> me prox
evcc> Proximity A/D= 1.50V
Proximity A/D= 1.50V
Proximity A/D= 1.50V
00:06:07.5 old state=CHARGING, new state=WARMDOWN, j1772=WAITING FOR DISC, term
rsn=EVSE UNLOCKED
Proximity A/D= 2.76V
Proximity A/D= 2.76V
Proximity A/D= 4.45V
00:06:12.0 old state=WARMDOWN, new state=WARMDOWN, j1772=DISCONNECTED, term rsn=0
Proximity A/D= 4.45V
Proximity A/D= 4.45V
```

measure pselect

The **measure pselect** command gives a real time measurement of the **pselect** input. Note that this output is reported in resistance.

```
evcc> me pselect
evcc> Pselect A/D= inf
Pselect A/D= inf
Pselect A/D= inf
Pselect A/D= inf
Pselect A/D= inf
```

upgrade

The **upgrade** command is used to perform a firmware upgrade. This command will place the EVCC into the serial bootloader mode, waiting for the load to begin. The EVCC must be power cycled in order to leave this mode. See above, Firmware Upgrade, for a description of how to perform a firmware upgrade.

```
evcc> upgrade
```

Configuring the EVCC with Multiple Chargers

Up to four chargers can be used in parallel for faster charging. A logical picture is shown in the diagram below.

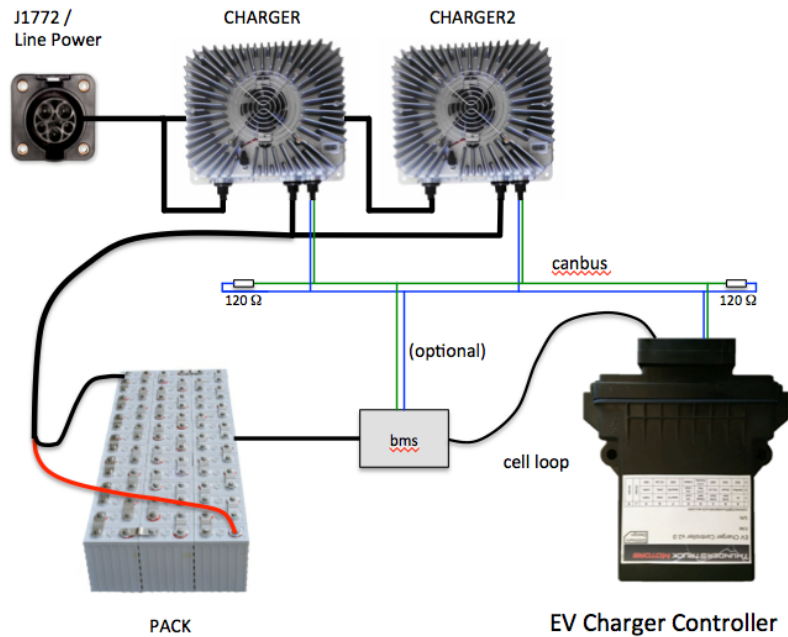


Figure 17 – Multiple Chargers - System Diagram

Note that there is a single J1772 interface for line power which feeds all chargers. The chargers are in parallel and they charge a single pack. All chargers are placed on the CANBUS. There is a single EVCC and it communicates with the chargers independently. (Also shown on the CANBUS is a CAN enabled BMS, optionally present).

There are several design considerations when installing multiple chargers.

- **Line power.** Two chargers require more power than a single charger. One must verify that adequate line power is available.
- **CAN wiring and addressing.** With more CAN nodes, the CAN wiring is no longer simply point to point and installation must be done with care. Each charger requires a unique CAN ID.
- **EVCC configuration.** Each charger must be explicitly configured in the EVCC.

Line Power

The EVCC assumes that the service can provide 220V at 30A. Note that the cutback feature, if enabled, will limit line voltage and current to configured limits.

Power calculations are needed to make sure that there is sufficient power available to power all chargers. A 220V / 30A circuit has 6600Watts available. Two 2.5Kw chargers running at full power can be placed on the line, but three chargers cannot. (In contrast, a 110V / 15A circuit only has 1650Watts available).

CAN Wiring and Addressing

See the section on CANBUS, above, for general guidelines. When installing multiple chargers, care must be taken that termination resistors are properly placed. Keep in mind that some chargers have a termination resistor installed in the charger, and so that charger must be at the end of the CAN string.

Each charger must have a unique CAN address. See the section *Charger Support* for information on how to determine the charger CAN address and change it if necessary.

EVCC Configuration

The EVCC supports up to four chargers (named: `charger`, `charger2`, `charger3`, and `charger4`). Chargers are defined in the EVCC using the **set charger** command. When a charger is configured, it is set to a “charger type”, which indicates both the manufacturer and its CAN address. It is possible to have chargers from multiple manufacturers (e.g., one ELCON and one TSM2500) at the same time.

The following example defines a single charger and sets its type to `tsm2500`:

```
evcc> set charger tsm2500
evcc> show config
  bms      : loop
  charger  : tsm2500
  maxv     : 158.0V
  maxc     : 12.0A
  termc    : 0.5A
  termt    : 720.0hr
evcc>
```

This example defines a second charger, and sets its type to `tsm2500_42`.

```
evcc> set charger2 tsm2500_42
evcc> show config
  bms      : loop
  charger  : tsm2500
  charger2 : tsm2500_42
  maxv     : 158.0V
  maxc     : 12.0A
  termc    : 0.5A
  termt    : 720.0hr
evcc>
```

A charger can be deleted by setting the type to “none”.

```
evcc> set charger2 none
```

Setting the CAN address of a TSM2500 Charger

This section describes how to set the CAN addresses of a `tsm2500` charger.

For this procedure, the charger can either be directly connected to mains power, or can be installed in the vehicle and the J1772 charge plug can be used to supply line power. When doing this procedure, insure that only one charger can receive line power.

In this example, we want to define a second charger as type `tsm2500_42`. If the charger is already programmed as type `tsm2500_42`, then it would only be necessary to use the command **set charger2 tsm2500_42**. In order to program the charger, it is necessary to use the **program** keyword.

To do this, power up the EVCC by keyswitch. Then type the following command:

```
evcc> set charger2 tsm2500_42 program
```

The EVCC will then print

```

***
***                               tsm2500 PROGRAMMING                               ***
*** WARNING: This command changes the CAN IDs of a tsm2500 charger ***
*** ONLY ONE tsm2500 charger should be powered up at this time ***
***

```

Proceed [Y/N] ?

If you type "y", the EVCC then prints

```
Programming the charger ...
```

and then 5-10 seconds later it prints

```

Programming the charger ... done.
The charger must now be power cycled.
evcc>

```

At that point the new charger will be programmed to tsm2500_42 and it will be configured in the evcc as "charger2".

Charging with Multiple Chargers

When charging with multiple chargers, maxc is divided by the number of chargers and given to each charger. So here is an example of charger tracing when maxc is set to 12A. Note that 6A goes to both TSM2500 and TSM2500_42. Note that "trace charger" reports the status of the charger ... and that voltage, current, watts, and watt hours may be slightly different.

```

evcc> trace charger
charger tracing is now ON
00:10:28.8 tsm2500_42: V=126.0, A= 5.8, W=730, Wh= 0.10
00:10:28.9 tsm2500_42: V=126.3, A= 5.9, W=745, Wh= 0.09
00:10:29.3 tsm2500_42: V=126.6, A= 5.7, W=721, Wh= 0.19
00:10:29.3 tsm2500_42: V=126.6, A= 5.8, W=734, Wh= 0.19
00:10:29.8 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.30
00:10:29.9 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.31
00:10:29.9 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.33
00:10:30.0 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.34
00:10:30.0 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.36
00:10:30.1 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.37
00:10:30.2 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.39
00:10:30.3 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.40
00:10:30.3 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.42
00:10:30.4 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.43
00:10:30.5 tsm2500_42: V=127.2, A= 5.9, W=750, Wh= 0.44

```

Integration with CAN Enabled BMS

The EVCC can be used with a CAN enabled Battery Management System. The following functions are supported:

- **High Voltage Cutoff (HVC) Detection.** In this case, the BMS detects that at least one cell has exceeded its programmed High Voltage Cutoff limit. If this occurs, the BMS sends a message to the EVCC which causes the EVCC to stop charging.
- **Balance Voltage Cutoff (BVC) Detection.** In this case, the BMS detects that at least one cell has exceeded its programmed Balance Cutoff limit. If this occurs, the BMS sends a message to the EVCC that it should reduce its charging current to the maximum balancing current (**maxbc**). Lowering the charging current allows current cell balancers to prevent additional charging of the highest cells in the pack.
- **Low Voltage Cutoff (LVC) Detection.** In this case, the BMS detects that at least one cell voltage is less than its programmed Low Voltage Cutoff limit. If this occurs, the BMS sends a message to the EVCC which causes the EVCC to operate the buzzer.

BMS Operation

The programming of the actual HVC, BVC, and LVC are done in the BMS. The BMS must determine if any cell in the pack meets these conditions and if so, it sets a bit associated with each of these conditions. This information is sent in a message from the BMS to the EVCC; the message must be periodically sent at least once a second.

```

/*
 * The EVCC supports 250Kbps CAN data rate and 29 bit identifiers
 */

#define uint8      unsigned char
/*
 * BMS->EVCC message Identifier
 */
#define BMS_EVCC_STATUS_IND      0x01dd0001
#define BMS_EVCC_CELL_HVC_FLAG  0x01 /* set if a cell is > HVC */
#define BMS_EVCC_CELL_LVC_FLAG  0x02 /* set if a cell is < LVC */
#define BMS_EVCC_CELL_BVC_FLAG  0x04 /* set if a cell is > BVC */

/*
 * BMS->EVCC message body
 */
typedef struct tBMS_EVCC_StatusInd
{
    uint8 bBMSStatusFlags; /* see bit definitions above */
    uint8 bReserved;      /* reserved, set to 0 */
} tBMS_EVCC_StatusInd;

```

Note that although the CAN message only has a 2 byte message body, up to 8 bytes may be sent to the EVCC. These bytes should be set to 0 if so. The EVCC will ignore additional message bytes.

EVCC Operation

In order to use the CAN interface with the BMS, it must be configured in the EVCC, using the **set bms** command. It is possible to configure the EVCC to only use **loop**, only use **can**, or use both **loop** and **can**.

If the EVCC is configured to only use **loop**, then if the loop circuit is closed then the pack is error free; if the loop circuit is open, HVC is assumed if in CHARGE mode and LVC is assumed if in DRIVE mode.

If the EVCC is configured to use only **can**, then the pack status is taken from the `BMS_EVCC_STATUS_IND` message. Note that the message also supports the BVC condition (which the loop does not). If that is reported, then

the EVCC will drop back into balance cutback. If there is a message timeout and `BMS_EVCC_STATUS_IND` does not arrive, then this is treated as a pack error (e.g., HVC and LVC are assumed).

If both **loop** and **can** are configured then an error results if either input reports an error. So, in this case, charging will stop if the loop opens, the CAN message indicates HVC, or there is a CAN message timeout.

Charging Lead Acid Batteries

Lead Acid Batteries require a multi-stage charging algorithm. The terminology to describe the algorithms varies in the industry and between manufacturers. Here we follow the documentation and requirements from Trojan. See http://www.trojanbattery.com/pdf/TRJN0109_UsersGuide.pdf.

As an example consider a EV pack that consists of 12 Trojan 30XHS deep cycle flooded batteries, charging at 25°C (77°F). See the following from http://www.trojanbattery.com/pdf/TRJN0111_ProdSpecGuide.pdf. For reference, the C_{20} rating of 30XHS batteries is 130AH (this number comes in handy below).

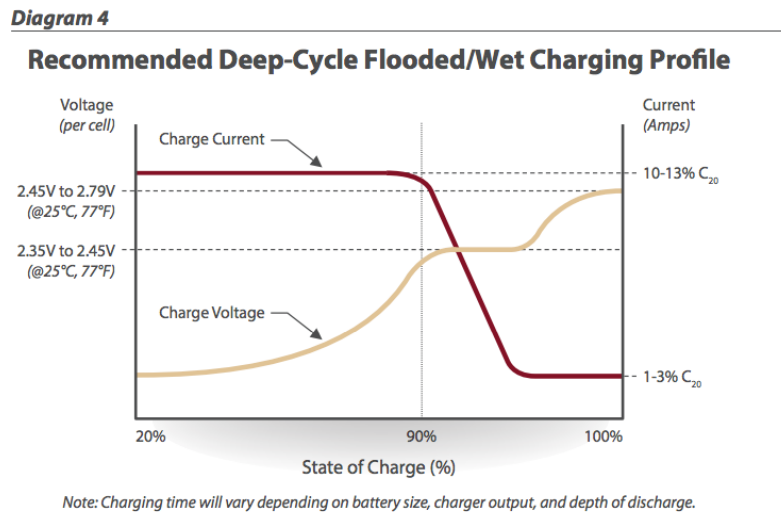


Figure 18 – Flooded Lead Acid Charging Profile (Trojan)

Bulk Charge

The first phase of charging is the Bulk Charge phase. (Note that the Bulk Charge phase is sometimes thought of as two phases: a constant current phase and a constant voltage phase). The EVCC supports this phase by the parameters **maxv** and **maxc**. This phase is used by both Lithium and Lead Acid chemistries (including flooded, AGM, and Gel).

See Figure 14, above. For flooded cells, the Bulk Charge phase brings the cells to over 90% state of charge. For its cells, Trojan recommends a maximum voltage of 2.35 to 2.45v per cell, and a current of 10-13% C_{20} . The bulk charge phase completes when the charging current drops to 1-3% of C_{20} .

In the example of twelve 30XHS cells, here are suggested EVCC settings:

- **maxv=172.8**: The charging voltage would be $2.4v * 6 \text{ cells} * 12 \text{ batteries} = 172.8v$.
- **maxc=13**: Since 30XHS cells have a C_{20} rating of 130AH, the charging current would be 13A.
- **termc=2.6**: The guidelines are 1-3% of C_{20} . 2.6A is 2% of the C_{20} rating of 30XHS.
- **termt=480**: (10 hours). This parameter is a failsafe; the actual time of charge will depend on depth of discharge. In 10 hours, this would allow $13A * 10H = 130 \text{ AH}$ to be delivered to the batteries.

Finishing Charge

For Lead Acid batteries, the second phase of charging is the “finishing charge” or “absorption charge” phase. The EVCC will only enter the finishing charge phase if the bulk charging phase completes successfully, if `termc` is reached. (In particular, if the bulk charge phase terminates because of a charging timeout [`termt`], then this is considered an abnormal termination).

For its cells, Trojan recommends a maximum voltage of 2.45 to 2.79v per cell, and a current limit of 1-3% of C_{20} . This phase completes when the charging voltage rises to the target finishing voltage.

In the example of twelve 30XHS cells, here are suggested EVCC settings:

- **`fin_maxv=187.2`**: The finishing voltage would be $2.6v * 6 \text{ cells} * 12 \text{ batteries} = 187.2v$.
- **`fin_maxc=2.6`**: Note that this is the same as the `termc` setting above.
- **`fin_termt=480`**: (2 hours). `fin_termt` may be set to “0” (or “forever”) but if it is set to a finite time, is a failsafe on this charging phase.

Float Charge

Once Lead Acid batteries are charged, they may be kept on a “float charge” or “trickle charge”. Lead Acid batteries have a relatively high self-discharge rate and this phase keeps them topped up if the EV sits for an extended period of nonuse.

For its cells, Trojan recommends a float voltage of 2.2v per cell. A current limit is not explicitly specified.

In the example of twelve 30XHS cells, here are suggested EVCC settings:

- **`flt_maxv=158.4`**: The float voltage would be $2.2v * 6 \text{ cells} * 12 \text{ batteries} = 158.4v$.
- **`flt_maxc=2.6`**: Note that this is the same as the `termc` setting, above.
- **`flt_termt=0`**: No timeout

Limitations

The EVCC does not support “equalization charge”. This type of charging purposely overcharges the batteries in order to balance the cells. Higher charge cells bubble off excess charge as hydrogen gas, and lower charged cells “catch up”.

Temperature sensors are not supported in the EVCC, so the EVCC does not perform temperature compensated charging. The examples assumes charging at a constant 25°C in a well ventilated area.

DISCLAIMER: This is an example only. These instructions do not cover all details or variations in the equipment and do not claim to provide for every possible contingency met in connection with installation, operation, or maintenance. It is strongly recommended that the user check with their battery supplier to determine appropriate charging parameters.

EVCC Change Log

This section describes the main functional differences between EVCC v2.4 and v2.3 hardware and firmware releases.

Hardware v2.1

This had a 30 pin Cinch connector.

Hardware v2.3

This had an 18 pin Cinch connector.

It also added a programmable CAN termination resistor (CANTERMDIS option)

It added J1772 pilot duty cycle support

Hardware v2.4

This adds “auto-power-on” by plugging in the J1772 plug. The **ChargeStart** signal has been removed.

“Cell Loop” supervision can additionally be done by an contact to ground. (See the **LOOPGROUND** option).

Up to 500ma of current can be supported at the **12V_Sw**, **OKToDrive**, and **PackFault** outputs.

Warranty and Support

The Thunderstruck return policy is available at <http://www.thunderstruck-ev.com/return-policy.html>.

The EV Charger Controller is warranted to be free from defects in components and workmanship under normal use and service for a period of 1 year.

When failing to perform as specified during the warranty period we will undertake to repair, or at our option, replace this product at no charge to its owner, provided the unit is returned undamaged and shipping prepaid, to Thunderstruck motors.

The product is intended for non-commercial use by hobbyists. The warranty does not apply to defects arising from miswiring, abuse or negligence, accidents, opening the enclosure, or reverse engineering. Thunderstruck Motors and Dilithium Design shall not be responsible for any incidental or consequential damages.

Thunderstruck Motors and Dilithium Design reserve the right to make changes or improvements in design or manufacturing without assuming any obligation to change or improve products previously manufactured and / or sold.

For general support and warranty issues, contact
connect@thunderstruck-ev.com

For errors in this document, or comments about the product, contact
djmdilithium@gmail.com

Document History

Rev 2.4.0 April 7, 2016