CURTIS®

MODEL 840 SERIAL DATA DISPLAY





Read Instructions Carefully !



Safety Instructions

This instrument was manufactured and tested according to the applicable technical standards. It complies with all the safety regulations as shipped from the factory.

Installation and startup must be performed by skilled personnel.

Failure to install and operate the unit in accordance with these instructions may result in damage or injury.

If safe operation of the instrument can no longer be ensured, stop and secure it against accidental operation.

If instrument failure or malfunction may cause personal injury or material damage, use additional safety measures such as limit switches, guards, etc.

Read the Operating Instructions carefully before startup.



Note the safety instructions marked with this warning symbol in this manual.

IABLE OF CONTENTS	<u>r age</u>
Model Encodement Technical Specifications 2.1 Electrical 2.2 Mechanical 2.3 Environmental	2 4 4 4 5
3. Installation	6
4. Operation	8
5. Troubleshooting	9

TABLE OF CONTENTS

6. Maintenance



10

Page

1. MODEL ENCODEMENT

840	<u>R</u>	<u>015R</u>	<u>s</u>
Model	Housing	Operating	Temperature
		Voltage	Rating
		015R = 12 VDC	$S = -10^{\circ}C$ to $+70^{\circ}C$
			F = -40°C, +70°C

<u>N</u>	<u>A</u>	<u>101</u>	<u>o</u>
Backlighting	Input	LED#	Logo
B = Backlit	A=Std	101=3 LEDs	N = No Logo
		102 = 6 LED	O= Curtis





2. TECHNICAL SPECIFICATIONS

2.1 ElectricalOperating Voltage Range:

12.0 to 15.0 VDC

Maximum Operating Current (@12.0 VDC):

50 mA

2.2 Mechanical

Display:

8-character, alphanumeric, dot-matrix LCD

Mating Connector:

Molex 8 pin, P/N 39-01-2085

Panel Cutout:

52mm, 2-1/16"

2.3 Environmental Operating Temperature Range:



-10°C to +70°C (Standard Model)

-40°C to +70°C (Freezer Model)

Enclosure Protection:

IP65 (Face), IP40 (Rear)

Shock & Vibration:

Meets SAE J 1378 (Jul 98)

3. INSTALLATION



Model 840 fits into a dash-panel cutout measuring 2-1/16" (52mm)

TERMINAL ASSIGNMENT

Pin 1: Spare

Pin 2: Spare

Pin 3: B+ (Heater), 24 VDC heater power for freezer option on 24 VDC vehicles

Pin 4: B+ (Heater), 36 VDC heater power for freezer option on 36 VDC vehicles

Pin 5: Power, (12.0 to 15.0 VDC) supplied from Curtis


Model 1297 motor controller

Pin 6: Data Input from Curtis Model 1297 motor controller

Pin 7: Spare

Pin 8: B- (Common)



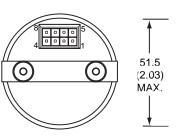

4. OPERATION

Being a communication device, Model 840 will operate with user intervention based on signals received from a Curtis Model 1297 motor controller. Upon initial power-up, the instrument will go through a self-diagnostic routine in which all display elements will be illuminated for 1 second and then blanked for 1 second. The LCD will then display "all asterisks" until the first message is received. The information on the display will then be controlled by the Curtis Model 1297 motor controller.

5. TROUBLESHOOTING

For any deviation in operation as described in Section 4, verify model number to ensure that the voltage rating of the unit matches the power supply and check connector seating for full engagement.

6. MAINTENANCE

Model 840 is not serviceable in the field. Units returned to the factory within the warranty period (see inside backcover) without damage will be replaced without charge. Guarantee - Curtis Instruments' products and/or components are guaranteed against defects in workmanship and material for a period of two years, or as defined in the individual product literature, from date of shipment from our factory, when applied in a proper application within specified ratings. This guarantee is limited to repair or replacement F.O.B. our factory. There is no further warranty or implied representation. quarantee, promise or agreement as to any Curtis Instruments product and/or component. Curtis Instruments, Inc., cannot assume responsibility or accept invoices for unauthorized repairs to its products and/or components, even though defective. In no case will Curtis Instruments' responsibility extend to products, components or equipment not of its manufacture. Under no circumstances shall Curtis Instruments. Inc., be liable for any special or consequential damages or loss of profits or other damages. Returned goods will not be accepted unless identified by a Curtis Return Material Authorization (RMA).

All specifications are subject to change without notice.

CURTIS®

CURTIS INSTRUMENTS, INC.

200 Kisco Avenue, Mt. Kisco, NY 10549 Tel. (914) 666-2971 • FAX (914) 666-2188